



INSTALLATION GUIDE

Tourig Shower Curtain

Designed for Mercedes-Benz Sprinters
2007-Present
144" WB & 170" WB/170" WB Ext.


Tools/Supplies Need

- Phillips Bit
- Drill or Impact drill
- Measuring Tape
- Ladder
- Center punch
- Hammer



Step 1 - Install Plastic Eye Strap

A1) Measure up from ground 75" on each door. This will be the center point of the plastic eye strap. These don't have to be exact, just close to that measurement, but not less and make sure both sides are the same to keep level. Hold eye strap in place and mark holes with sharpie

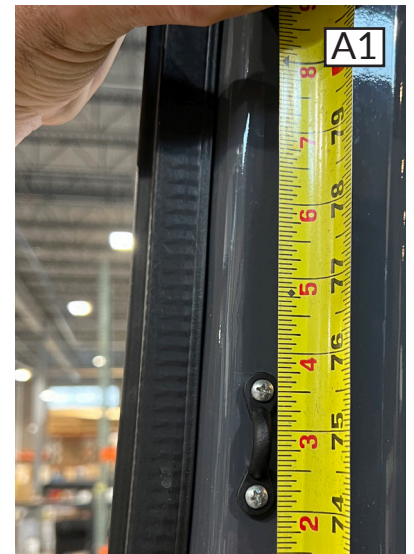

Step 2 - Screw Eye Straps in Place

A2) Take center punch and punch location of each mark made with sharpie.

Place plastic eye strap up to location and screw in provided #8-18 x 1" Phillips self tapping screws. Do this for both doors in same location. **DO NOT OVER TIGHTEN.**



Now go out and enjoy!

If you have any questions,
please contact us at:
info@mytourig.com or
303.710.2914